

ENGAGE 1700 RANGEFINDER - ENGAGE 1700 6X24MM RANGEFINDER

[Optics & Mounting](#) > [Rangefinders](#)

The Bushnell Engage Laser Rangefinders are designed to give you the cool confidence to take that long-range shot secure in the knowledge that your first shot will hit where you want it to.



Attributes

- Name: [ENGAGE 1700 6X24MM RANGEFINDER](#)
- Manufacturer: [BUSHNELL](#)
- Product no.: 100046031
- Mfr. No.: LE1700SBL
- Battery: CR2
- Color: Green
- Magnification: 6x
- Objective Size: 24mm
- Delivery weight: 0.363kg
- Shipping height: 76mm
- Shipping width: 152mm
- Shipping length: 152mm
- UPC: 029757005380

Item details

This product contains a battery.

Table of Contents

- [Startpage](#)
- [ENGAGE 1700 RANGEFINDER Safety Instructions](#)
- [About Us](#)

ENGAGE 1700 RANGEFINDER Safety Instructions

Introduction

Thank you for choosing the Bushnell Engage 1700 Rangefinder. This guide provides essential safety information to ensure the safe and effective use of your rangefinder. Please read this guide carefully before using the product.

General Safety Guidelines

- Always follow the manufacturer's instructions for safe use.
- Ensure that the rangefinder is used in accordance with local laws and regulations.
- Keep the device out of reach of children and vulnerable individuals.
- Regularly inspect the rangefinder for any signs of damage or malfunction.
- If the rangefinder is damaged, discontinue use immediately and seek professional assistance.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Do not point the rangefinder at any person or animal.
- Avoid using the rangefinder in extreme weather conditions, such as heavy rain or strong winds.
- Do not use the rangefinder while operating a vehicle or other machinery.
- Ensure that the lens is clean and free from obstructions before use.
- Use the rangefinder only for its intended purpose—measuring distances.
- Do not attempt to disassemble or modify the rangefinder.

Instructions for Installation and Usage

1. Inserting the Battery

- Open the battery compartment located on the rangefinder.
- Insert a CR2 battery, ensuring correct polarity.
- Close the battery compartment securely.

2. Turning On the Rangefinder

- Press the power button to turn on the device.
- Wait for the display to initialize.

3. Measuring Distances

- Aim the rangefinder at the target.
- Press the measure button to obtain the distance reading.
- The distance will be displayed on the screen.

4. Adjusting Magnification

- Use the magnification adjustment ring to set the desired zoom level (up to 6x).
- Ensure that your view is clear before taking a measurement.

5. Turning Off the Rangefinder

- Press the power button to turn off the device after use.
- Store the rangefinder in a protective case when not in use.

Disposal Instructions

- Dispose of the rangefinder and its components in accordance with local regulations.
- Do not dispose of the rangefinder in household waste.
- Remove the battery before disposal and recycle it according to local guidelines.

Contact Information for Further Support

For assistance with your Bushnell Engage 1700 Rangefinder, please refer to the manufacturer's website or contact your local retailer. Ensure you have your product details ready for support.

By following these safety instructions, you can ensure a safe and enjoyable experience with your Bushnell Engage 1700 Rangefinder. Thank you for your attention to safety.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at