

NO. 14 BIPOD ADAPTER FOR RUGER MINI-30 & MINI-14 - HARRIS

NO. 14 ADAPTER FOR RUGER MINI-30 & MINI-14

[Shooting Accessories](#) > [Bipods, Monopods & Accessories](#) > [Bipod Accessories](#)

No. 14 Adapter For Ruger Mini-30 and Mini-14. Fits standard and ranch rifles
Will not fit the 180 series or Ruger folding stock. Carry sling fits adapter or
bipod clamp with Q.D. sling swivel Quick detachable



Attributes

- Name: [HARRIS NO. 14 ADAPTER FOR RUGER MINI-30 & MINI-14](#)
- Manufacturer: [HARRIS](#)
- Product no.: 430104208
- Mfr. No.: NO. 14
- Attachment: Direct Mount
- Delivery weight: 0.113kg
- Shipping height: 51mm
- Shipping width: 127mm
- Shipping length: 140mm
- UPC: 051156000147

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [NO. 14 Bipod Adapter for Ruger Mini30 & Mini14 Safety Instruction Guide](#)
- [About Us](#)

NO. 14 Bipod Adapter for Ruger Mini30 & Mini14 Safety Instruction Guide

Introduction

Thank you for choosing the NO. 14 Bipod Adapter for Ruger Mini30 & Mini14. This guide provides essential safety instructions to ensure the safe and effective use of your product. Please read this document carefully before installation and usage.

General Safety Guidelines

- Ensure that all users are familiar with the proper handling and operation of firearms.
- Always handle firearms with care, treating them as if they are loaded.
- Keep the bipod adapter out of reach of children and unauthorized users.
- Inspect the adapter regularly for any signs of wear or damage.
- Do not use the adapter if it is damaged or malfunctioning.
- Follow all local laws and regulations regarding the use of firearms and accessories.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- The NO. 14 Adapter is designed for use with Ruger Mini30 and Mini14 rifles only.
- Do not attempt to use the adapter with the 180 series or Ruger folding stock models.
- Ensure that the adapter is securely attached before use to prevent accidents.
- Carry sling fits the adapter or bipod clamp with Q.D. sling swivel; ensure proper attachment.
- Do not exceed the weight limit of the bipod when in use to avoid tipping or instability.
- Always use the adapter in a safe environment, away from bystanders.

Instructions for Installation and Usage

1. Installation

- Ensure the firearm is unloaded and pointed in a safe direction.
- Remove any existing bipod or accessory from the rifle.
- Align the NO. 14 Adapter with the mounting points on your Ruger Mini30 or Mini14.
- Securely attach the adapter using the provided hardware, ensuring it is tightened according to the manufacturer's specifications.
- Confirm that the adapter is firmly in place before proceeding.

2. Usage

- When using the bipod adapter, ensure that the rifle is stable and supported.
- Adjust the bipod legs to the desired height for optimal shooting position.
- Always be aware of your surroundings and ensure a clear line of sight before firing.
- After use, detach the adapter if necessary, and store it in a safe place.

Disposal Instructions

- Dispose of the NO. 14 Bipod Adapter in accordance with local regulations.
- Do not dispose of the adapter in general household waste.
- Consider recycling options if available in your area.

Contact Information for Further Support

For any inquiries or further assistance regarding the NO. 14 Bipod Adapter, please refer to the manufacturer's website or customer service resources.

Thank you for your attention to these safety guidelines. Your safety and the safety of others is of utmost importance. Enjoy using your NO. 14 Bipod Adapter responsibly.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk