

DIRTY BIRD GUNSLINGER SILHOUETTE 12 x 18" TARGET - BIRCHWOOD CASEY DIRTY BIRD GUNSLINGER SILHOUETTE 12 X 18" TARGET 6 PACK

[Shooting Accessories](#) > [Targets & Accessories](#) > [Paper Targets](#)

BIRCHWOOD CASEY DIRTY BIRD GUNSLINGER SILHOUETTE 12X18" TARGET
FEATURES: Spot your shots easily? Intense splatter offers superior downrange
contrast? Great targets for all types of pistol-action shooting? Heavy tagboard
construction 12" x 18"? 6 Pack



Attributes

- Name: [BIRCHWOOD CASEY DIRTY BIRD GUNSLINGER SILHOUETTE 12 X 18" TARGET 6 PACK](#)
- Manufacturer: [BIRCHWOOD CASEY](#)
- Product no.: 430114039
- Mfr. No.: BC-35770
- Style: Bullseye
- Target Size/Type: Large 12 to 20
- Type: Papers
- Quantity: 6
- Delivery weight: 1.937kg
- Shipping height: 317mm
- Shipping width: 463mm
- Shipping length: 30mm
- UPC: 888151076521

Table of Contents

- [Startpage](#)
- [DIRTY BIRD GUNSLINGER SILHOUETTE 12 x 18" TARGET SAFETY INSTRUCTIONS](#)
- [About Us](#)

DIRTY BIRD GUNSLINGER SILHOUETTE 12 x 18" TARGET SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the DIRTY BIRD GUNSLINGER SILHOUETTE 12 x 18" TARGET. This product is designed for safe and effective use in pistolaction shooting. Please read this safety instruction guide carefully to ensure your safety and the safety of others while using this product.

General Safety Guidelines

- Always handle targets in a safe and responsible manner.
- Ensure that the shooting area is clear of unauthorized personnel.
- Use targets only in designated shooting ranges or safe shooting environments.
- Regularly inspect the target for any damage before use.
- Follow all local laws and regulations regarding the use of shooting targets.

Specific Safety Precautions for Use

- Do not use targets in environments where ricochets or unintended shots could cause injury or damage.
- Ensure that the target is securely mounted and stable before shooting.
- Always wear appropriate eye and ear protection while shooting.
- Keep a safe distance from the target when firing.
- Never attempt to retrieve or handle the target while shooting is in progress.

Instructions for Installation and Usage

1. Installation:

- Choose a suitable location for the target that is away from populated areas.
- Securely mount the target to a stable backing or stand that can withstand impacts.
- Ensure the target is positioned at a safe height and angle to minimize the risk of ricochets.

2. Usage:

- Before shooting, confirm that the area is clear of people and obstacles.
- Load your firearm only when ready to shoot.
- Aim carefully at the target and ensure your firearm is pointed in a safe direction.
- After shooting, wait for a signal or ensure the area is safe before retrieving the target.

Disposal Instructions

- Dispose of any damaged targets in accordance with local regulations regarding waste disposal.
- Do not burn or incinerate targets, as they may contain materials that are harmful when burned.
- If the target is no longer usable, please recycle where facilities exist.

Contact Information for Further Support

For any safety inquiries or concerns regarding the DIRTY BIRD GUNSLINGER SILHOUETTE 12 x 18" TARGET, please refer to the manufacturer's contact information provided with your product packaging.

Conclusion

Your safety is our priority. By following these guidelines, you can ensure a safe and enjoyable shooting experience. Always stay informed about best practices and local regulations to maintain a safe environment for all. Thank you for choosing DIRTY BIRD products.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk