

EJECTOR HOUSING SCREW FOR RUGER® REVOLVERS - EJECTOR HOUSING SCREW FOR RUGER BEARCAT

[Handgun Parts](#) > [Action Parts](#) > [Ejector Parts](#) > [Ejector Screws](#)

FITS: New Model Bearcat®, Serial # Above 93-00000, .22



Attributes

- Name: [EJECTOR HOUSING SCREW FOR RUGER BEARCAT](#)
- Manufacturer: [RUGER](#)
- Product no.: 780000944
- Mfr. No.:
- Make: Ruger
- Model: Bearcat
- Delivery weight: 0.005kg
- Shipping height: 5mm
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Ejector Housing Screw for Ruger® Revolvers Safety Instruction Guide](#)
- [About Us](#)

Ejector Housing Screw for Ruger® Revolvers

Safety Instruction Guide

Introduction

Thank you for choosing the Ejector Housing Screw for Ruger® Revolvers, specifically designed for the New Model Bearcat®, Serial # Above 9300000, .22. This guide provides important safety instructions and information to ensure the safe use and installation of this product.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in this guide.
- Always read and understand the instructions before using or installing the product.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for signs of damage or wear. If damaged, do not use it.
- Report any unsafe products or incidents to the relevant authorities.
- Stay informed about product recalls or safety updates via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Use protective eyewear when handling or installing the ejector housing screw.
- Ensure that the firearm is unloaded before attempting any installation or maintenance.
- Follow the manufacturer's guidelines for the specific firearm model to avoid compatibility issues.
- Never attempt to modify the ejector housing screw or use it with incompatible parts.
- Use only the recommended tools for installation to prevent injury or damage.

Instructions for Installation and Usage

1. Preparation

- Make sure the firearm is completely unloaded and stored safely.
- Gather necessary tools: a screwdriver that fits the screw head securely.

2. Installation Steps

- Locate the ejector housing on your Ruger® Bearcat revolver.
- Remove the old screw if applicable, ensuring not to damage surrounding parts.
- Align the new ejector housing screw with the mounting hole.
- Gently insert the screw and handtighten it to avoid crossthreading.
- Use the screwdriver to securely tighten the screw, but do not overtighten as this may cause damage.

3. PostInstallation Check

- Once installed, check that the ejector housing is secure and functions properly.
- Test the firearm in a safe environment to ensure everything operates smoothly.

Disposal Instructions

- Dispose of any old screws or parts in accordance with local regulations.
- Do not discard the product in regular household waste. Instead, follow local guidelines for the disposal of metal parts.

Contact Information for Further Support

For any questions or concerns regarding the Ejector Housing Screw for Ruger® Revolvers, please refer to the manufacturer's website or customer service for assistance. Ensure you have the product details at hand when seeking support.

By following these guidelines, you can ensure the safe and effective use of the Ejector Housing Screw for Ruger® Revolvers. Thank you for prioritizing safety and compliance with EU regulations.

About Us

Brownells Sverige

Brownells Sverige - Världens största leverantör av Vapendelar, Vapensmide Verktyg & Skyttetillbehör

Brownells Sverige AB
Box 99
793 22 Leksand
Sverige

www.brownells.se