

# RECOIL PLATE CROSS PIN

[Handgun Parts](#) > [Recoil Parts](#) > [Recoil Plate Parts](#)

FITS: New Model Bearcat®, Serial # Above 93-00000, .22



## Attributes

- Name: [RECOIL PLATE CROSS PIN](#)
- Manufacturer: [RUGER](#)
- Product no.: 780000947
- Mfr. No.: PR49
- Make: Ruger
- Model: Bearcat
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm

## Item details

Made in USA

# Table of Contents

- [Startpage](#)
- [RECOIL PLATE CROSS PIN Safety Instructions](#)
- [About Us](#)

# RECOIL PLATE CROSS PIN Safety Instructions

## Introduction

Thank you for choosing the RECOIL PLATE CROSS PIN for your Ruger Bearcat® firearm. This product is designed to enhance the performance and reliability of your firearm. To ensure safe and effective use, please read this safety instruction guide carefully before installation and use.

## General Safety Guidelines

- Always handle firearms with care and respect.
- Ensure that the firearm is unloaded before performing any maintenance or installation.
- Keep this product out of reach of children and unauthorized users.
- Follow all local laws and regulations regarding firearm ownership and use.
- Regularly inspect your firearm and its components for signs of wear or damage.
- Report any unsafe products or incidents to the appropriate authorities.

## Specific Safety Precautions for Use

- Ensure that the RECOIL PLATE CROSS PIN is compatible with your Ruger Bearcat® model, specifically those with a serial number above 9300000.
- Always wear protective eyewear when working on or near firearms.
- Do not attempt to modify the RECOIL PLATE CROSS PIN or any other firearm components.
- If you are unsure about the installation or use of this product, seek assistance from a qualified gunsmith.

## Instructions for Installation and Usage

### 1. Preparation

- Make sure the firearm is completely unloaded.
- Gather the necessary tools for installation, including a punch tool and hammer.

### 2. Installation Steps

- Locate the recoil plate area of your Ruger Bearcat®.
- Align the RECOIL PLATE CROSS PIN with the designated hole in the recoil plate.
- Gently tap the pin into place using the punch tool and hammer, ensuring it is securely fitted.
- Doublecheck that the pin is flush with the recoil plate and does not protrude.

### 3. PostInstallation Check

- Inspect the installation to ensure there are no loose parts.
- Perform a function check of your Ruger Bearcat® to ensure proper operation.

### 4. Usage Guidelines

- Follow the manufacturer's instructions for operating your firearm.
- Regularly check the RECOIL PLATE CROSS PIN for any signs of wear or damage, particularly after extensive use.

## Disposal Instructions

- Dispose of any damaged or unused parts in accordance with local regulations.
- Do not dispose of the RECOIL PLATE CROSS PIN in regular household waste.

- Contact your local waste management facility for proper disposal methods.

## **Contact Information for Further Support**

For any questions regarding the RECOIL PLATE CROSS PIN or safety concerns, please contact the manufacturer or a qualified firearms expert. Ensure that you have the product details and serial number available for reference.

Thank you for prioritizing safety and compliance when using the RECOIL PLATE CROSS PIN. Enjoy your shooting experience responsibly.

# About Us

## Brownells Sverige

**Brownells Sverige - Världens största leverantör av Vapendelar, Vapensmide Verktyg & Skyttetillbehör**

Brownells Sverige AB  
Box 99  
793 22 Leksand  
Sverige

[www.brownells.se](http://www.brownells.se)