

# EJECTOR ROD ASSEMBLY FOR RUGER® NEW VAQUERO - EJECTOR ROD ASSEMBLY BLUED

[Handgun Parts](#) > [Action Parts](#) > [Ejector Parts](#) > [Ejector Rod Assemblies](#)

Factory replacement ejector rod assembly for Ruger® New Vaquero revolvers chambered in .357 Magnum; .38 Special; .44-40 Winchester; .44 Magnum; .44 Special and .45 Colt calibers.



## Attributes

- Name: [EJECTOR ROD ASSEMBLY BLUED](#)
- Manufacturer: [RUGER](#)
- Product no.: 780001297
- Mfr. No.:
- Make: Ruger
- Model: New Vaquero
- Delivery weight: 0.045kg
- Shipping height: 3mm
- Shipping width: 83mm
- Shipping length: 146mm

## Item details

Made in USA

# Table of Contents

- [Startpage](#)
- [Ejector Rod Assembly Safety Instruction Guide](#)
- [About Us](#)

# Ejector Rod Assembly Safety Instruction Guide

## Introduction

Thank you for choosing the Ejector Rod Assembly for Ruger® New Vaquero. This product is designed to provide reliable performance for your revolver. To ensure your safety and the safety of others, please read and follow these safety instructions carefully.

## General Safety Guidelines

- Always treat firearms with respect and handle them as if they are loaded.
- Ensure that the ejector rod assembly is compatible with your specific model of Ruger® New Vaquero.
- Store the ejector rod assembly in a safe place, away from children and unauthorized users.
- Regularly inspect the ejector rod assembly for any signs of damage or wear before use.
- Follow all local laws and regulations regarding firearm ownership and usage.

## Specific Safety Precautions for Use

- Do not use the ejector rod assembly if it shows any signs of damage.
- Avoid using excessive force when installing or using the ejector rod assembly.
- Ensure that the revolver is pointed in a safe direction during installation and usage.
- Always wear appropriate safety gear, including eye protection, when handling firearms.
- If you experience any malfunctions while using the ejector rod assembly, cease use immediately and consult a qualified gunsmith.

## Instructions for Installation and Usage

### 1. Preparation:

- Ensure the revolver is unloaded and pointed in a safe direction.
- Gather necessary tools for installation (if applicable).

### 2. Installation:

- Remove the existing ejector rod assembly from the revolver by following the manufacturer's instructions.
- Align the new ejector rod assembly with the mounting point on the revolver.
- Secure the assembly in place, ensuring it is firmly attached but not overtightened.

### 3. Usage:

- Use the ejector rod assembly as intended, ensuring the revolver is in a safe and stable position.
- Regularly check the assembly during use to ensure it remains secure and functional.

## Disposal Instructions

- Dispose of any damaged or worn ejector rod assemblies in accordance with local regulations.
- Do not dispose of the ejector rod assembly in regular household waste.
- Contact local waste management authorities for guidance on proper disposal methods.

## Contact Information for Further Support

For any inquiries regarding safety concerns, product performance, or additional support, please contact the manufacturer or a qualified professional. Always refer to the manufacturer's guidelines for specific assistance.

related to your product.

Thank you for prioritizing safety and compliance with these guidelines. Enjoy your Ruger® New Vaquero safely!

# About Us

## Brownells Sverige

**Brownells Sverige - Världens största leverantör av Vapendelar, Vapensmide Verktyg & Skyttetillbehör**

Brownells Sverige AB  
Box 99  
793 22 Leksand  
Sverige

[www.brownells.se](http://www.brownells.se)