

EJECTOR HOUSING SCREW FOR RUGER® REVOLVERS - EJECTOR HOUSING SCREW RUGER SINGLE/BISLEY/BLACKHAWK/ SUPER

[Handgun Parts](#) > [Action Parts](#) > [Ejector Parts](#) > [Ejector Screws](#)

FITS: New Model Bearcat®, Serial # Above 93-00000, .22



Attributes

- Name: [EJECTOR HOUSING SCREW RUGER SINGLE/BISLEY/BLACKHAWK/ SUPER](#)
- Manufacturer: [RUGER](#)
- Product no.: 780012088
- Mfr. No.: KXR03302
- Make: Ruger
- Model: Single Six
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [EJECTOR HOUSING SCREW FOR RUGER® REVOLVERS SAFETY INSTRUCTIONS](#)
- [About Us](#)

EJECTOR HOUSING SCREW FOR RUGER® REVOLVERS SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the Ejector Housing Screw for Ruger® Revolvers. This guide provides essential safety instructions and guidelines to ensure the safe use of this product. Please read this manual carefully before installation and use.

General Safety Guidelines

- Ensure that the product is suitable for your specific model of Ruger revolver, specifically the New Model Bearcat®, Serial # Above 9300000, .22.
- Always handle firearms with care and ensure they are unloaded before performing any maintenance or installation.
- Keep the product out of reach of children and unauthorized users.
- Regularly check for any signs of wear or damage to the ejector housing screw and replace it if necessary.
- Follow all local laws and regulations regarding firearm maintenance and safety.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including eye protection, when working with firearms.
- Do not attempt to install or remove the ejector housing screw while the firearm is loaded.
- Ensure that the workspace is clean and free from distractions to avoid accidents during installation.
- If you are unsure about the installation process, seek assistance from a qualified gunsmith.

Instructions for Installation and Usage

1. Preparation:

- Ensure the Ruger revolver is unloaded and pointed in a safe direction.
- Gather all necessary tools, including a screwdriver that fits the ejector housing screw.

2. Installation:

- Locate the ejector housing on your Ruger revolver.
- Carefully remove the old ejector housing screw if applicable.
- Align the new ejector housing screw with the housing and insert it gently.
- Securely tighten the screw, ensuring it is snug but not overtightened to avoid damage.

3. PostInstallation Check:

- After installation, check that the ejector housing is securely attached and functions properly.
- Test the revolver to ensure that the ejector operates as intended.

Disposal Instructions

- Dispose of any old or damaged ejector housing screws in accordance with local regulations.
- Do not dispose of firearm parts in regular household waste. Contact local waste management for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or further assistance, please reach out to the designated EU contact point for this product. Always ensure you have the latest information regarding recalls or safety notices.

This safety instruction guide is designed to comply with the EU General Product Safety Regulation (GPSR) and ensure the safe use of the Ejector Housing Screw for Ruger® Revolvers. Please keep this guide for future reference and share it with other users of this product.

About Us

Brownells Sverige

Brownells Sverige - Världens största leverantör av Vapendelar, Vapensmide Verktyg & Skyttetillbehör

Brownells Sverige AB
Box 99
793 22 Leksand
Sverige

www.brownells.se