

EJECTOR ROD SPRING, BLUE

[Handgun Parts](#) > [Action Parts](#) > [Ejector Parts](#) > [Ejector Springs](#)

FITS: Bisley™ - Common Parts; New Model Blackhawk®; New Model Single-Six®; Super Blackhawk®, .44 Mag; Vaquero®



Attributes

- Name: [EJECTOR ROD SPRING, BLUE](#)
- Manufacturer: [RUGER](#)
- Product no.: 780012098
- Mfr. No.:
- Make: Ruger
- Model: Blackhawk
- Delivery weight: 0.009kg
- Shipping height: 5mm
- Shipping width: 53mm
- Shipping length: 140mm

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Ejector Rod Spring Safety Instructions](#)
- [About Us](#)

Ejector Rod Spring Safety Instructions

Introduction

Thank you for choosing the Ejector Rod Spring, Blue. This product is designed to fit various Ruger models, including the Bisley™, New Model Blackhawk®, New Model SingleSix®, Super Blackhawk®, .44 Mag, and Vaquero®. To ensure your safety and the proper functioning of your firearm, please read this safety instruction guide carefully.

General Safety Guidelines

- Always handle firearms with care and follow basic safety rules.
- Ensure that the Ejector Rod Spring is compatible with your firearm model before installation.
- Keep this product out of reach of children and unauthorized users.
- Regularly inspect the Ejector Rod Spring for wear or damage.
- In case of any malfunction, cease use immediately and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Ensure that the firearm is unloaded before installing or replacing the Ejector Rod Spring.
- Use appropriate tools and follow installation instructions carefully to avoid injury.
- Never attempt to modify the Ejector Rod Spring or any other firearm components.
- If you experience any issues during installation or usage, seek professional assistance.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is completely unloaded.
- Gather necessary tools, including a screwdriver and any other required equipment.

2. Installation Steps:

- Remove the existing Ejector Rod Spring from the firearm.
- Carefully install the new Ejector Rod Spring, ensuring it is seated correctly.
- Reassemble the firearm, following the manufacturer's guidelines.

3. Usage:

- Test the functionality of the Ejector Rod Spring by cycling the action of the firearm.
- Ensure that the ejector operates smoothly and without obstruction.

Disposal Instructions

- Dispose of any old or damaged Ejector Rod Springs in accordance with local regulations.
- Do not dispose of in regular household waste; consider recycling options if available.

Contact Information for Further Support

For any inquiries regarding the safety or performance of the Ejector Rod Spring, please consult your local dealer or a qualified gunsmith.

About Us

Brownells Sverige

Brownells Sverige - Världens största leverantör av Vapendelar, Vapensmide Verktyg & Skyttetillbehör

Brownells Sverige AB
Box 99
793 22 Leksand
Sverige

www.brownells.se