

# EJECTOR, UPPER/LH 682 SK/LARGE FRAME RAW

[Shotgun Parts](#) > [Receiver & Action Parts](#) > [Ejector Parts](#) > [Ejectors](#)

**FITS: S682, 28**

All ejectors require gunsmith fitting by Beretta qualified gunsmiths, they are not user installed.



## Attributes

- Name: [EJECTOR, UPPER/LH 682 SK/LARGE FRAME RAW](#)
- Manufacturer: [BERETTA USA](#)
- Product no.: 913300621
- Mfr. No.: C52320
- Make: Beretta
- Model: S682,682
- Delivery weight: 0.018kg
- Shipping width: 83mm
- Shipping length: 146mm

# Table of Contents

- [Startpage](#)
- [EJECTOR, UPPER/LH 682 SK/LARGE FRAME RAW Safety Instruction Guide](#)
- [About Us](#)

# EJECTOR, UPPER/LH 682 SK/LARGE FRAME RAW

## Safety Instruction Guide

### Introduction

Thank you for choosing the EJECTOR, UPPER/LH 682 SK/LARGE FRAME RAW. This product is designed for use with Beretta firearms. It is important to read and understand the safety instructions provided in this guide to ensure safe usage and handling of the product.

### General Safety Guidelines

- Ensure that the ejector is fitted by a Beretta qualified gunsmith. This product is not designed for user installation.
- Always handle firearms with care and follow all safety guidelines provided by the firearm manufacturer.
- Regularly inspect the ejector for any signs of wear or damage.
- Keep the ejector and firearms out of reach of children and unauthorized users.
- Report any unsafe products or incidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform to remain informed about product safety.

### Specific Safety Precautions for Use

- Only use this ejector with compatible Beretta models, specifically the S682 and 682.
- Ensure that the firearm is unloaded before inspecting or working on the ejector.
- Do not attempt to modify the ejector in any way, as this may compromise safety and functionality.
- If you experience any malfunctions or issues with the ejector, cease use immediately and consult a qualified gunsmith.
- Avoid using the ejector in adverse conditions, such as extreme temperatures or moisture, which may affect its performance.

### Instructions for Installation and Usage

#### 1. Installation:

- Have the ejector professionally fitted by a Beretta qualified gunsmith.
- Ensure that the gunsmith follows all manufacturer guidelines during installation.

#### 2. Usage:

- Before using the firearm, ensure that the ejector is securely installed and functioning properly.
- Always follow the firearm manufacturer's instructions for safe operation.
- After use, clean and maintain the ejector as recommended by the gunsmith.

### Disposal Instructions

- Dispose of the ejector in accordance with local regulations regarding the disposal of firearm components.
- Do not throw away the ejector in regular household waste.
- Contact local authorities or waste management services for specific disposal guidelines.

### Contact Information for Further Support

For further assistance and support regarding the EJECTOR, UPPER/LH 682 SK/LARGE FRAME RAW, please consult your Beretta qualified gunsmith or refer to the official Beretta website for additional resources.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)