

ClayCopter Rip-Launcher

[Shooting Accessories](#) > [Targets & Accessories](#) > [Throwers](#)

The ClayCopter Rip-Launcher™ is the perfect way to launch ClayCopter targets with no batteries required—just a simple pull. Powered by a pull-cord system, this launcher lets you experience the excitement of ClayCopter targets without wires or power packs. Simply pull the self-winding cord to send targets flying up to 80 yards with ease.

Portable and handheld, the Rip-Launcher is easy to take to the range and fits conveniently into most gear bags. Compatible with all Caldwell ClayCopter targets, it can launch both single targets and target pairs. Enjoy fast, simple, and engaging shooting action—just give the Rip-Launcher™ a pull.

NO IMAGE
AVAILABLE

Attributes

- Name: [ClayCopter Rip-Launcher](#)
- Manufacturer: [CALDWELL](#)
- Product no.: EU2016837
- Mfr. No.: 1237307
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm
- UPC: 198700004654

Table of Contents

- [Startpage](#)
- [ClayCopter RipLauncher Safety Instructions](#)
- [About Us](#)

ClayCopter RipLauncher Safety Instructions

Introduction

Thank you for choosing the ClayCopter RipLauncher™. This guide provides essential safety instructions and usage guidelines to ensure a safe and enjoyable experience with your product. Please read this document carefully before using the RipLauncher.

General Safety Guidelines

- Ensure that all users are familiar with the safety instructions before operating the RipLauncher.
- Always use the RipLauncher in a safe environment, away from people, animals, and obstacles.
- Keep the launcher away from children and unauthorized users.
- Regularly inspect the RipLauncher for any signs of damage or wear. Do not use a damaged launcher.
- Follow local laws and regulations regarding the use of such launching devices.

Specific Safety Precautions for Use

- Always point the launcher in a safe direction when pulling the cord.
- Do not attempt to modify or repair the RipLauncher; contact the manufacturer for any issues.
- Ensure that the area is clear of people and animals before launching targets.
- Use only Caldwell ClayCopter targets with the RipLauncher.
- Avoid using the launcher in wet or extreme weather conditions.
- Do not use the RipLauncher while under the influence of drugs or alcohol.

Instructions for Installation and Usage

1. **Assembly:** The RipLauncher comes preassembled. Ensure that all parts are intact before use.
2. **Loading Targets:**
 - Place a single target or a pair of targets into the designated launching area of the RipLauncher.
 - Ensure targets are securely positioned before launching.
3. **Launching Targets:**
 - Stand at a safe distance from the launcher and ensure the area is clear.
 - Grasp the handle firmly and pull the selfwinding cord smoothly to launch the targets.
 - Observe the flight of the targets and ensure they land safely.
4. **PostUse Care:**
 - After use, store the RipLauncher in a dry place.
 - Do not leave the launcher exposed to the elements.

Disposal Instructions

- When the RipLauncher reaches the end of its life, dispose of it in accordance with local waste disposal regulations.
- Do not dispose of the launcher in household waste. Check for recycling options or take it to a designated disposal facility.

Contact Information for Further Support

For any safety inquiries or support, please refer to the manufacturer's contact information provided in the product packaging or visit the manufacturer's website.

By following these safety instructions, you can enjoy the full benefits of the ClayCopter RipLauncher while ensuring a safe experience for yourself and those around you. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk